



## **EXPRESS CARD FIREWIRE**

### **2 Port FireWire 400 ExpressCard/34**



## **USER MANUAL**

XFW2EXC

[www.hamletcom.com](http://www.hamletcom.com)

Dear Customer,

thanks for choosing an Hamlet product. Please carefully follow the instructions for its use and maintenance and, once this item has run its life span, we kindly ask You to dispose of it in an environmentally friendly way, by putting it in the separate bins for electrical/electronic waste, or to bring it back to your retailer who will collect it for free.



We inform You this product is manufactured with materials and components in compliance with ROHS directives: 2002/95/CE; with RAEE Directives: 2003/96/CE, Italian Legislative Decree 2005/151 and below EEC Directives: EN 55022: 2006+A1: 2007, EN 55024: 1998+A1: 2001+A2: 2003, EN 61000-3-2: 2006, EN 61000-3-3: 1995+A1: 2001+A2: 2005.

### **Trademarks**

All trademarks and company names mentioned in this manual are used for description purpose only and remain property of their respective owners.

### **Changes**

The material in this document is for information only and subject to change without notice. Hamlet reserves the right to make changes or revisions in the product design or the product manual without reservation and without obligation to notify any person of such revisions and changes.

---

## Introduction

---

### System Requirements

- Windows 2000/XP/Vista
- One available ExpressCard slot

### Package Contents

- 2 port FireWire 400 ExpressCard
- 6pin-4pin FireWire cable
- Resource CD
- User Manual

---

## Installation

---

1. Insert the card into an available ExpressCard slot.
2. The system will detect the new device and install the required driver automatically.

---

## Verifying the installation

---

Follow the instructions in this section to verify that the controller was installed correctly.

1. Right click the **My Computer** icon, select **Properties**, left click on the **Hardware** tab and then on the **Device Manager** button.
2. Double click on "IEEE 1394 Bus host Controllers". If there is no yellow ! or ? in front of "Texas Instruments OHCI Compliant IEEE 1394 Host Controller" the driver has started correctly.
3. To view information about the devices attached to the controller, right click on **Devices** and select **Properties** from the context menu, then select the tab labelled **General**.